How to Use the dishwasher

01. Open the dishwasher



03. close the flap




05. choose a program



02. Insert the tablet into the housing

into the housing (without plastic casing)

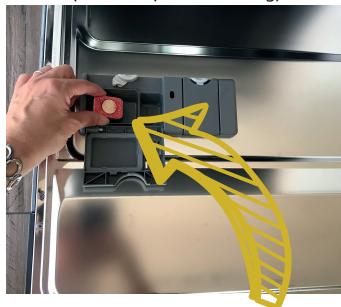

04. Turn it on



06. close the door



You're done, now the dishwasher will start